





ERGO**DYNAMIC**

ERGO**DYNAMIC**


An immensely comfortable posture chair with a vast array of standard features and optional additions. Ergo Dynamic® has a standard synchro mechanism, seat slide, seat tilt, inflatable lumbar support, 5D armrests and height adjustable backrest.

Standard Features

- Synchro mechanism with independent forward seat tilt, back angle adjustment and multi-position lock
- Seat slide
- Inflatable lumbar support
- 5D height and width adjustable armrests with sliding and rotating arm pads
- Black nylon stiletto base

Options

- Bases (CSB & BAB)
- Coccyx relief cut-out (CXC)
- Pressure relief memory foam (MFS)
- Two-tone seat panel (TTSP)
- 190KG conversion (190C)
- Inflatable sacral support (ISS)
- Inflatable DUO support (IDS)

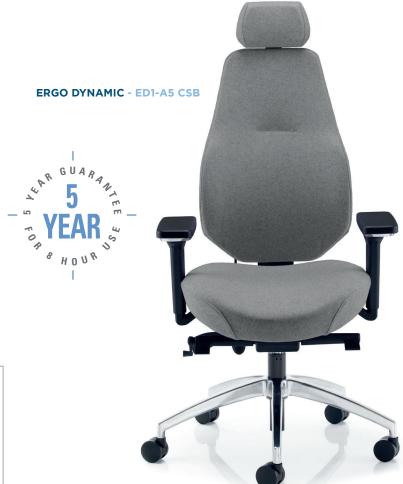





Tested by scientists to perform*

OPERATING INSTRUCTIONS



SEAT TILT

Twist the paddle at the rear of the chair to free the tilt angle of the seat pan. Lock by pushing the paddle back in to place.

2 TENSION CONTROL

Rotate this handle clockwise to increase the tension of the seat and back tilt to suit the individual user.

3 GAS LIFT

Lift the middle paddle to operate the gas lift. Lifting will increase the chair height. If sitting whilst the lever is lifted the chair height will lower.

4 SEAT SLIDE

Pull this small handle under the seat to adjust the seat slide to your preferred position. Release to lock in position.

5 ARM PAD ROTATION & SLIDE

Grab the pad and twist left or right and push / pull forward, backward or side-to-side to achieve your desired arm pad position.

6 LOCKING TILT CONTROL

Lift this paddle to free the tilt angle of the back and seat to your preferred position. To lock in position push the lever back down.

ARM HEIGHT ADJUSTMENT

Press the button on the outside of the armrest and lift the armrest to your preferred position. Release the button to lock the armrest to your preferred height.

8 ARMREST WIDTH ADJUSTMENT

Turn and loosen the handwheels located under each armrest and pull the armrest away from the seat to your preferred position. Tighten the handwheels to lock the armrests in position.

ADJUSTABLE HEADREST

Lift the headrest upwards to your preferred height and angle if required to provide further neck support.

10 HEIGHT ADJUSTABLE RATCHET BACKREST


To move the backrest up and down lift until you hit your desired position. The backrest has 7 available settings that are indicatd by a small clicking sound. Once the highest setting is surpassed, the backrest will reset to its lowest position.


11 INFLATABLE LUMBAR SUPPORT

To increase the support to the lumbar area of the chair, squeeze the hand bulb. To deflate, press the small button located near the bulb.

NEVER OVERINFLATE



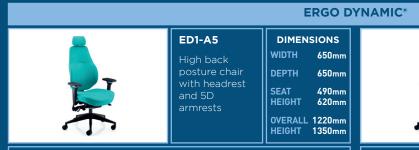

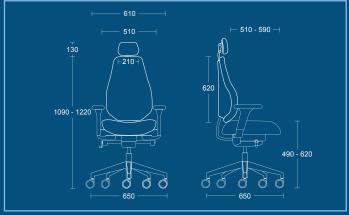



ED2-A5

with 5D

High back

posture chair

DIMENSIONS

650mm

650mm

490mm

620mm

WIDTH

DEPTH

HEIGHT

Ergo Design®

Parkside Mill Walter Street Blackburn Lancashire BB1 1TL

Telephone: **01254 673400**

Email: sales@ergodesign.org

www.ergodesign.org



